

- 1 = Yellow
- 2 = Red
- 3 = Green
- 4 = White
- 5 = Black

Blue = No Connection

NOTE!

Disconnect your entire Bang & Olufsen system from the mains while you make the connections!

